



# 1998-2002 Honda Accord Headlight Disconnect Replacement

Written By: Miroslav Djuric



## INTRODUCTION

PRE-REQ ONLY!



## Step 1 — Headlight Disconnect



- Pull on the hood release lever just inside the passenger door to pop the hood.
- Locate the hood release latch under the hood. Use one hand to press up on the latch while you lift the hood.
- Insert the hood prop rod into the hole in the hood marked with an arrow.



## Step 2

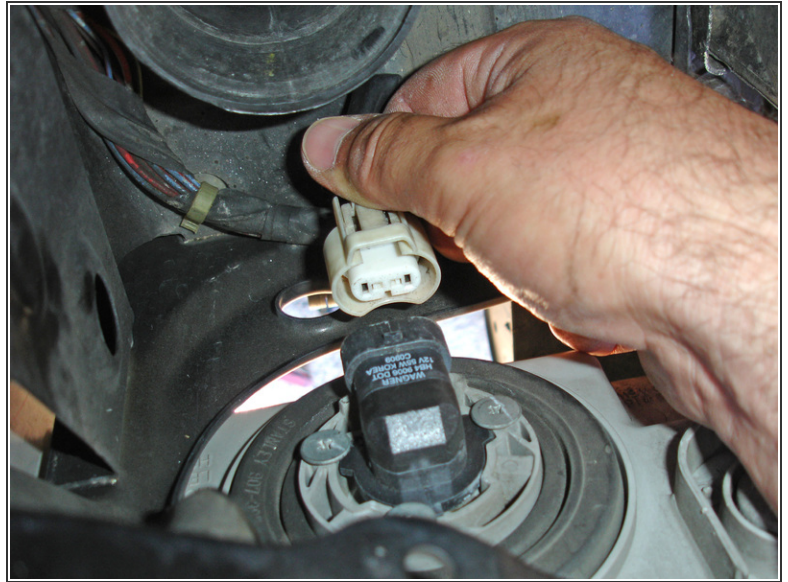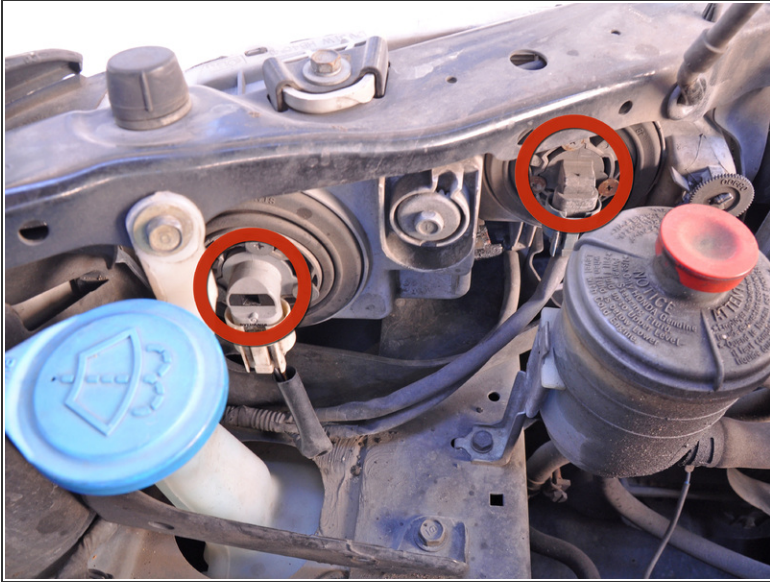

- Locate the head light bulbs and connectors directly behind the headlights and on either side of the engine bay.
- Detach the head light connectors by pushing on the lever on the top of the connector and pulling it straight down.
- ⓘ If needed, you can disconnect the air intake (next to the battery) to get some extra wiggle room in order to detach the head light connector on the passenger side. If you remove the air intake, be sure to plug both sides with a clean, lint-free cloth so that nothing gets inside while you work.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:09:47 PM.